

HERO3⁺

SILVER EDITION

/ Hello

Congratulations on your new HERO3+. This Quick Start Guide will help you learn the basics of capturing life's most incredible moments with your GoPro.

JOIN THE GOPRO MOVEMENT



facebook.com/GoPro



youtube.com/GoPro



twitter.com/GoPro


 


instagram.com/GoPro

/ Getting Started

1


REMOVE CAMERA FROM HOUSING

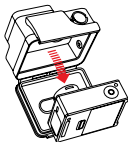

2

REMOVE CAMERA SIDE DOOR AND INSERT MICROSD CARD

 (Class 10 required, sold separately)




3

REMOVE CAMERA BACK DOOR AND INSERT BATTERY



4

CHARGE BATTERY USING INCLUDED USB CABLE

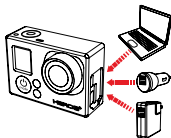


/ Camera Essentials

Shutter/Select Button []

Camera Status Light [red]


LCD Status Screen

Power/Mode Button []

Wi-Fi On/Off Button []

Wi-Fi Status Light [blue]

Camera Status Light [red]

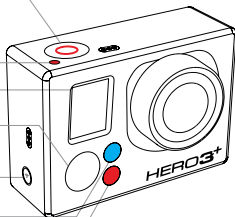


POWERING CAMERA ON AND OFF


To power **ON**

Press the Power/Mode Button [].

To power **OFF**

Press and hold the Power/Mode Button [] for two seconds.

/ Selecting Camera Modes

Turn camera **ON** and repeatedly press the Power/Mode Button [] to cycle through camera modes.



VIDEO

Record video



PHOTO

Capture a single photo



BURST PHOTO

Capture photo bursts



TIME LAPSE

Shoot a series of photos at set time intervals



SETTINGS

Adjust camera settings, resolution and more








PLAYBACK*


View your videos and photos on a TV or LCD Touch BacPac™

**Playback only appears when camera is connected to a TV or LCD Touch BacPac (optional accessory, sold separately).*

/ Camera Settings*


TO ADJUST CAMERA SETTINGS:


1. Press the Power/Mode Button [] to cycle to Settings mode [].
2. Press the Shutter/Select Button [] to enter the Settings menu.
3. Press the Power/Mode Button [] to cycle through options.
4. Press the Shutter/Select Button [] to select desired option.

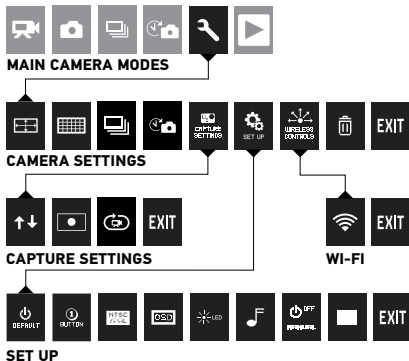


*For a full explanation of camera settings, see the User Manual.

/ Capturing Video + Photos

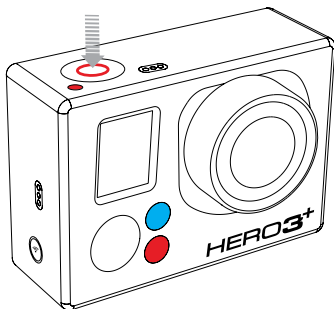

Press the Shutter/Select Button
[] to start/stop recording or
take a photo.

You can change video and photo
settings in the Settings menu [].


/ Default Video + Photo Settings

DEFAULT VIDEO SETTING: 960P60 FPS


Your camera is set to 960p60 fps, which delivers a large viewing area and smooth footage. It's great for gear- and body-mounted shots.

If you want to experiment with other video settings, you can find more info in the Camera Settings section of the User Manual.

DEFAULT PHOTO SETTING: 10MP

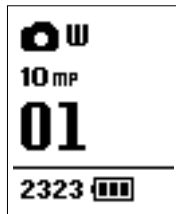







Your camera is set to 10MP resolution, allowing you to capture stunning high-resolution photos.

You can adjust photo resolution in the Settings menu [].

/ Connecting to the GoPro App

The GoPro App lets you control your camera remotely using a smartphone or tablet. Features include full camera control, live preview, playback and sharing of select content and more*.

1. Download the GoPro App to your smartphone or tablet at the Apple App Store, Google Play or Windows Phone marketplace.
2. Press the Power/Mode Button [] to power camera **ON**.
3. Press the Wi-Fi On/Off Button [] twice, then press the Shutter/Select Button [] to enter the **Wi-Fi** menu [].
4. Press the Power/Mode Button [] to cycle to **GoPro App**, then press the Shutter/Select Button [] to select it.
5. In your smartphone or tablet's Wi-Fi settings, connect to the network called "GOPRO-BP" followed by a series of numbers/letters. Enter the password "goprohero"**.
6. Open the GoPro App on your smartphone or tablet.



**For device compatibility, please visit gopro.com.*

***This is the default network name and password. You can customize this if you update your camera software at gopro.com/update.*

/ Playing Back Videos + Photos

There are several ways to play back your videos and view your photos.



LCD TOUCH BACPAC™

Removable LCD touch screen
(sold separately).



TV

Connect via Micro HDMI, Composite
or Combo Cable (sold separately).



GOPRO APP

Play back and share select content
using your smartphone or tablet.




 
COMPUTER

Connect via included USB cable.



/ Mounting Your Camera

Attach your HERO3+ to helmets, gear and equipment.

FLAT SURFACE MOUNTING

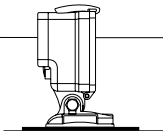


CURVED SURFACE MOUNTING

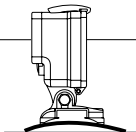 


NOTE: To remove adhesive mounts, heat with a hair dryer then peel off mount.

/ Mounting Your Camera (Continued)

VERTICAL MOUNTING

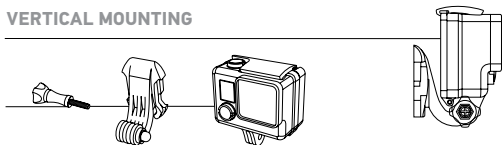

SIDE MOUNTING

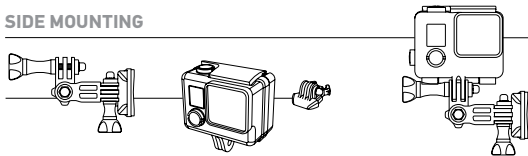

/ Optional Accessories*



LCD Touch BacPac™



Wrist Housing



Wi-Fi Remote



Chest Mount Harness



The Frame



Head Strap + QuickClip



Jaws Flex Clamp Mount



Surfboard Mounts



Handlebar/Seatpost/
Pole Mount

See more at **gopro.com**

**Optional accessories sold separately*

/ Help + Resources

CUSTOMER SUPPORT

GoPro is dedicated to providing the best possible service. To reach GoPro Customer Support, visit **gopro.com/support**.

GOPRO TUTORIAL VIDEOS

How-to tutorials, pro tips and tricks to help you make the most of your GoPro products. Visit **youtube.com/goprotutorials**.

CAMERA SOFTWARE UPDATES

To get the latest features and best performance from your HERO3+, make sure you're using the most current camera software. To check for available updates and download the latest camera software, visit **gopro.com/update**.